




# QUICK GUIDE

## AP-1 ACOUSTIC PREAMP/D.I.

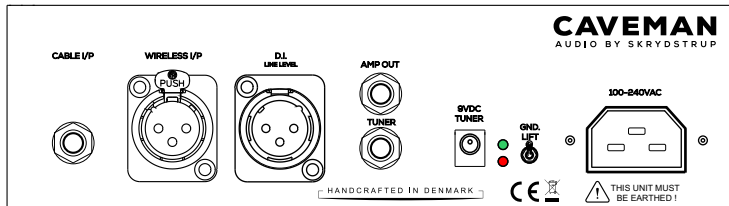

### **CABLE I/P**

This is where you connect the cable from your guitar.

### **WIRELESS I/P**

This is where you connect the output from your wireless receiver if you have the AP1W.

Transformer isolated balanced 3-pin XLR female bushing - pin 2 is hot, pin 3 is cold, and pin 1 is ground/screen. The cable input has priority over the Radio/Wireless input.

### **D.I. OUTPUT (LINE LEVEL)**

Main output to FOH/Mixing desk.

Transformer balanced isolated 3-pin XLR male bushing - pin 2 is hot, pin 3 is cold, and pin 1 is ground/screen.

### **AMP OUT**

Additional transformer isolated 1/4" TRS output to feed an external amplifier.

The amplifier connected must be earthed/grounded.

### **TUNER**

Isolated Tuner Output. Always active.

### **9VDC TUNER**

9VDC @ 50mA supply to power your tuner. Center negative.

Visual indication of the 9VDC supply. If the red LED lights, either the cable or the tuner is shorted.

### **GND.LIFT**

System Ground Lift switch. Set for minimum noise/hum.

### **100-240VAC**

Mains Inlet. Will accept 100-240VAC 50/60Hz.